


► Cut Humidity pad to proper size, and then fix on the view window with 2 pins included.

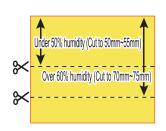

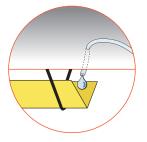

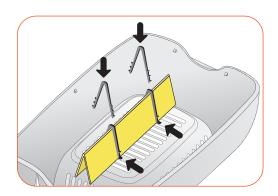


New Evaporating ability is different from pad size.

* You can use Humidity pad for about 4 ~6 months, but it can be different depending on water quality.

- * Humidity pad can be purchased separately.
- ▶ Assemble bottom body, Tray, and Tray hatching pad.





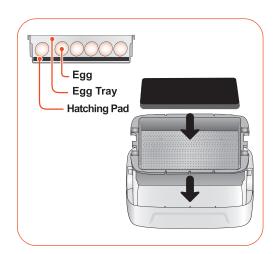

▶ Place eggs by adjusting tray divider according to egg size.



Control the space of eggs and divider optimally so the eggs are not interrupted for incubation.



The egg to incubate must be a fertilized egg. (Refer to the Rcom common sense app.)





It is recommended to place eggs with sharp end down.

